



## Battery tester Superpart BT-934

**1** Turn the rotary switch on Volt-Position to test the battery or:

- AA for Mignon Battery
- AAA for Micro Battery and
- D for Mono Battery

Attention: For photo batteries, Lithium batteries and coin cells are specially marked areas!

**2** You can now test the Battery voltage with the probe cable.

Optionally coin cells can also be tested in the Side Slot. In this case put the battery with the negative side upward and push the button down onto the battery.

**3** Now you can see the voltage on the analog display. There are 3 areas, one for standard batteries, one for coin cells and lithium batteries and one for rechargeable batteries.

Scope of delivery	Nº
1 Battery tester complete	209471

### Information

There is no sufficiently reliable method for determining residual capacity of batteries. Unless the battery is totally unloaded. Nevertheless it helps to test the battery voltage.